

Wetroom System

The first system with a lifetime guarantee

**QUICK
& EASY**



**WATERPROOF
PROMISE**



**LIFETIME
GUARANTEE**




STS

Choose the NoMorePly Wetroom System for easy installation and complete peace of mind.

Wetrooms provide the indulgent shower experience that your customers are all looking for and with our system, you can easily deliver that hotel look and feel without any problems. We make it easy by taking you through the process for specifying and installing a wetroom:

1. Choose the trap to suit the wetroom location and finished look
2. Select the wetroom tray to fit the space and your trap
3. Consider a wetroom board kit and remember to tank before tiling

Our system results in a step-free shower access. Providing you follow the installation guidance, you'll benefit from a watertight promise and lifetime guarantee.

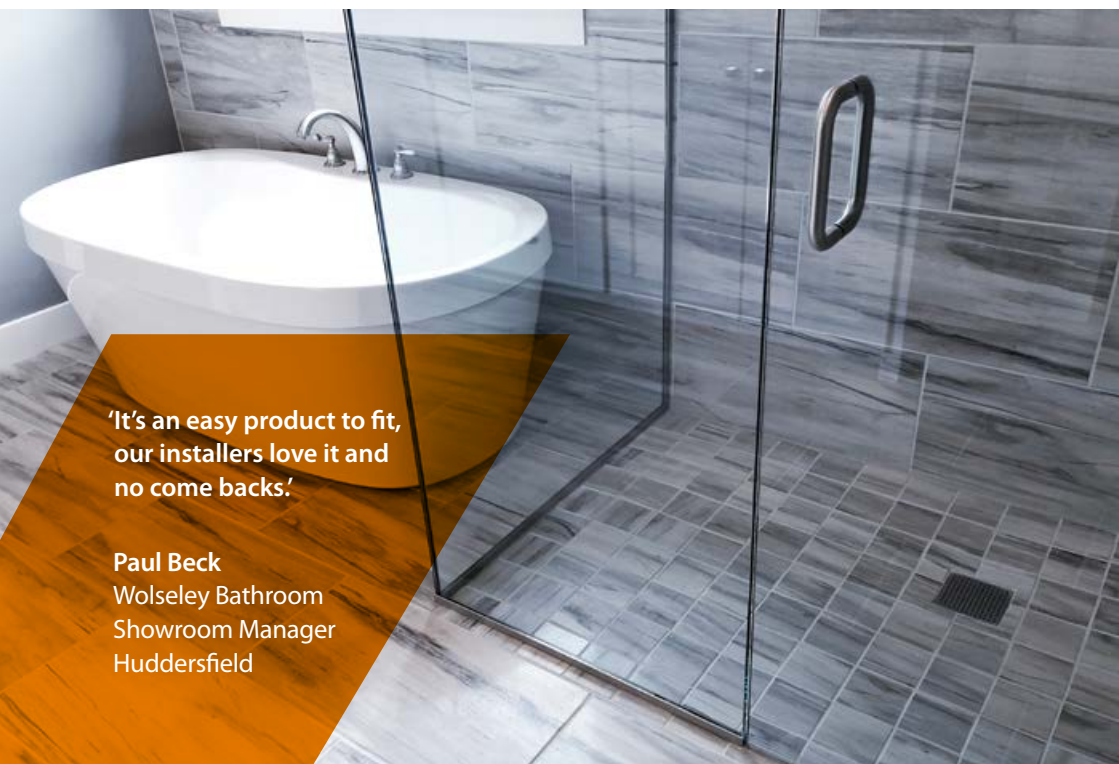

**'It's an easy product to fit,
our installers love it and
no come backs.'**

Paul Beck
Wolseley Bathroom
Showroom Manager
Huddersfield



1. Traps

Traps can be either square or linear. Square traps are positioned centrally in the shower area, whilst linear traps are positioned to one end.

2. Trays

Trays come in four sizes, ranging from 1000mm square to 1500 x 800mm, which enables a simple switch from bath to shower for those looking to transform their room.

3. Board and Tanking Kits

To make installation easier, NoMorePly has produced Kits which include everything you need to fit a wetroom before tiling, including

tile backer boards, fixings, tapes and products to waterproof your shower area.

6mm tile backer boards strengthen existing timber floors before tiling and these marry up with our trays to ensure a watertight solution. Thicker, 12mm boards are also available to build partition walling and these are strong enough to carry the heaviest wall tiles and tricky wall fixings. Our waterproofing kit includes a fast drying (under 2 hours) one coat membrane, which is one of the best in class and comes highly recommended.

1. Choose the trap to suit the wetroom location and finished look.

High performance traps offering fast flow drainage and easy installation. Compact design to sit within the height of a floor joist with top access for easy cleaning. Choose fitting to suit draining outlet.

Code	Description	Style
5931	Horizontal	Square
5932	Vertical	Square
5934	Horizontal 300mm	Linear
5936	Horizontal 600mm	Linear

- Compact 80mm depth
- 40L/min drainage
- Stainless steel grate
- 360° Swivel outlet on linear
- Tileable grate on linear



Horizontal 5931



Vertical 5932



Horizontal 300mm 5934

Also available
Horizontal 600mm
5936

'Easy to fit and guaranteed watertight. It's my first choice every time.'

Craig Sellars
Pro Tiler
Since 1984








2. Select the wetroom tray to fit the space and your trap.

The NoMorePly tray is constructed from high density extruded polystyrene sandwiched between a reinforced cement and fibre glass layer. Its unique rebated edge provides an extra waterproof barrier when married up with 6mm NoMorePly tile backer boards. This tray fits within the height of existing floor boards directly onto the joists, creating step-free access into the showering area, however, it does require under-boarding for support. Ideal for ensembles, wet rooms and care applications.

Code	Description	Drain
5940	1000 x 1000	Centre
5941	1200 x 900	Centre
5942	1500 x 800	Linear
5943	1200 x 900 (300mm Drain)	Linear
5944	1500 x 1000 (600mm Drain)	Linear

- Light weight
- Easy to cut
- Rebated edge
- Suitable for most tiles

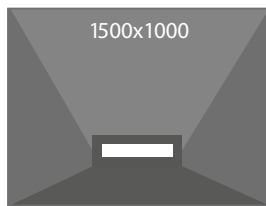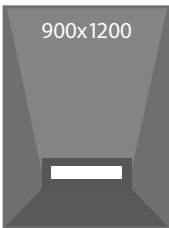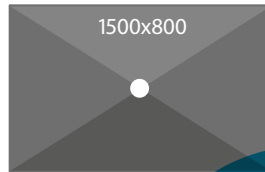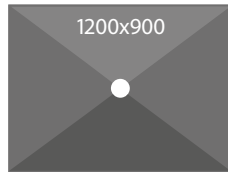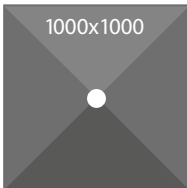

Our unique rebate ensures that **NoMorePly** boards fit the tray perfectly to ensure a waterproof promise

For advice on installation
 call: **0800 0094 354**
 or visit: sts-uk.com/wetrooms
 Lines open: Monday-Friday 7am-5pm

3. Consider a wetroom board kit and remember to tank before tiling.

NoMorePly wetroom board kits include everything you need to overboard a timber floor and waterproof the complete showering area before tiling. Remember, our 6mm NoMorePly boards marry up perfectly with our trays to provide a watertight promise.

Wetroom Size (Total Floor Area)	3m ²	4m ²	5m ²	6m ²	8m ²	10m ²	12m ²
6mm NoMorePly (1200 x 600mm)	3	5	8	8	10	13	16
NoMorePly PU Adhesive	2	3	3	3	3	3	3
Screws (200 x 25mm)	1	1	1	1	1	1	1
Scoring Knife	1	1	1	1	1	1	1
Beava Waterproofing Kit	1	1	1	1	1	1	1
Order Code	5423	5424	5425	5426	5428	5430	5432



NoMorePly PU Adhesive 310ml

Fast-setting polyurethane adhesive used to secure wetroom trays to joists and tile backer boards to timber, metal, brick, stone or concrete substrates. It is also used to create a waterproof seal between tile backer boards.



10m Waterproof Joint Sealing Tape

Seals corners and joints. Flexible with a split backing makes it easy to apply.





Code	Description	Pallet
5588	Beava Waterproof Kit 8m ²	40

Fast Drying Primer. Includes quartz crystals for increased adhesion.

Corner Tape. Self adhesive for quick and easy application.

One Coat Membrane. Flexible, waterproof and dries in approximately 2 hours.

Gloves and Block Brush. Everything you will need to complete the job.

10m Waterproof Double Sided Tape

Ideal for use between baths, shower trays and walls, providing a tidy fit to corners.



3kg Blue Tank™

Waterproof membrane that's applied in a single coat using a brush and dries within 2 hours. Covers approximately 8m²



Installing your tray and trap

Timber floor application

1A



2A



1B



2B



Step 1

1A. Sweep the area clean, mark the position for your tray.

1B. Cut free the floor boards and remove them. Fit extra timbers to support edge of existing floor if required.

PRO TIP Always run a 50mm pipe for a minimum of 1m from the trap to maximise flow.

Step 2

2A. Position the trap directly below the preformed drain opening and connect to the external waste.


2B. Fix 2x1" PSE battens to each side of joists using NoMorePly PU Adhesive and screws. Position the battens according to the thickness of your OSB board.



For advice on installation

call: 0800 0094 354 or visit: [sts-uk.com/wetrooms](https://www.sts-uk.com/wetrooms)

Lines open: Monday-Friday 7am-5pm

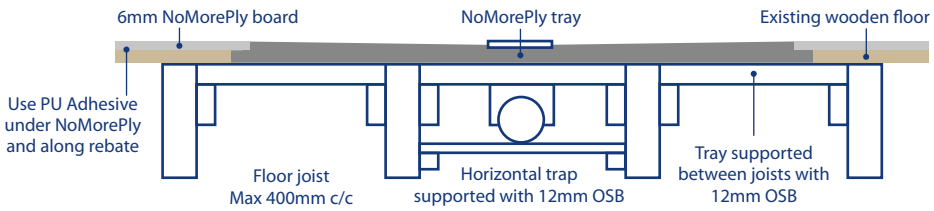

3A



4A



3B



4B



Step 3

3A. Support the trap with timber to correct height. The top of the black seal should be flush with top of the joist.

3B. Cut strips of OSB board to fit between joists and fix to battens with NoMorePly PU Adhesive and screws. This will provide a strong flat base for your tray to sit on.

PRO TIP 12mm OSB can be used and makes it easier to connect the trap but 18mm is preferred.

Step 4

4A. Stick the tray to your prepared base using NoMorePly PU Adhesive.

4B. Secure the edges of the tray through the rebated section using the washers and screws provided. **Only screw through the rebate section.** Run a thick bead of NoMorePly PU Adhesive between the tray and walls.

PRO TIP Always use epoxy grout within the wet area and the surrounding 500mm.



Top Tip

View our installation video
NoMorePly wetroom Installation

Tanking your wetroom

1A



2A



1B



2B



Step 1

1A. Run a bead of NoMorePly PU Adhesive along the rebated section on the two floor facing edges of the tray.

1B. Lay your first sheet of Pre-Primed NoMorePly board as per fitting instructions overlapping onto the rebate of the tray.

Step 2

2A. Continue to fit your Pre-Primed NoMorePly across the rest of the floor until complete.

2B. Apply the waterproof tape to all joints between tray and floor and between tray and wall. The split back makes it easy to apply and manipulate into corners.

PRO TIP Waterproof tape can easily be formed in corners and around pipework without the need for corner pieces.

The logo for STS, consisting of the letters 'STS' in white on a dark blue square background.

For advice on installation

call: 0800 0094 354 or visit: [sts-uk.com/wetrooms](https://www.sts-uk.com/wetrooms)

Lines open: Monday-Friday 7am-5pm

Beava Waterproofing Kit Includes BLUE TANK™ unique ONE-COAT tanking membrane, enough to cover 8m². Fast drying, ready to tile in approx. 2 hours.



3A



4A



3B



4B



Step 3

3A. Apply tape down the corner of the wall overlapping it where it meets on the tray.

3B. Once taping is complete apply one coat of the TANKING™ primer to the area that is to be tanked. This absorbs any dust and gives excellent adhesion for the tanking membrane.

Step 4

4A. Apply BLUE TANK™ membrane to the walls in the immediate showering area and 600mm beyond.

4B. The tray does not need tanking but apply membrane to the floor area 600mm beyond the showering area. The membrane covers 8m² so use it up, the more the better. The tanked area will be ready to tile in approx. 2 hours.



STS Guarantee and guidance

Lifetime Guarantee

The NoMorePly lifetime guarantee only applies when the correct installation procedures, as set out in our Installation Guide, have been followed and the recommended NoMorePly system essentials used during installation.

LIFETIME
GUARANTEE



For guidance only

As conditions of use and any labour involved are beyond our control, end users must satisfy themselves by prior testing that the product is suitable for their specific application. No responsibility can be accepted or any warranty given by our representatives, agents or distributors.



Delivery is fast

Orders received by 3pm will be dispatched the same day for delivery the following working day.

If you need it faster just ask and we can put it on a time specific delivery for a little extra charge.

Ordering is easy

Ordering couldn't be easier

Call our sales team on: **0113 2022010**

Email us at: **sales@sts-uk.com**

STS

For advice on installation

call: **0800 0094 354** or visit: **[sts-uk.com/wetrooms](https://www.sts-uk.com/wetrooms)**

Lines open: Monday-Friday **7am-5pm**